

Powermaster RSG Explosion View

Distributed by:

AFW Access Systems

3670 NW 79th Street


Miami, FL 33147

Phone: 305-691-7711

Fax: 305-693-1386

E-mail: sales@anchormiami.com

Visit www.AnchorMiami.com

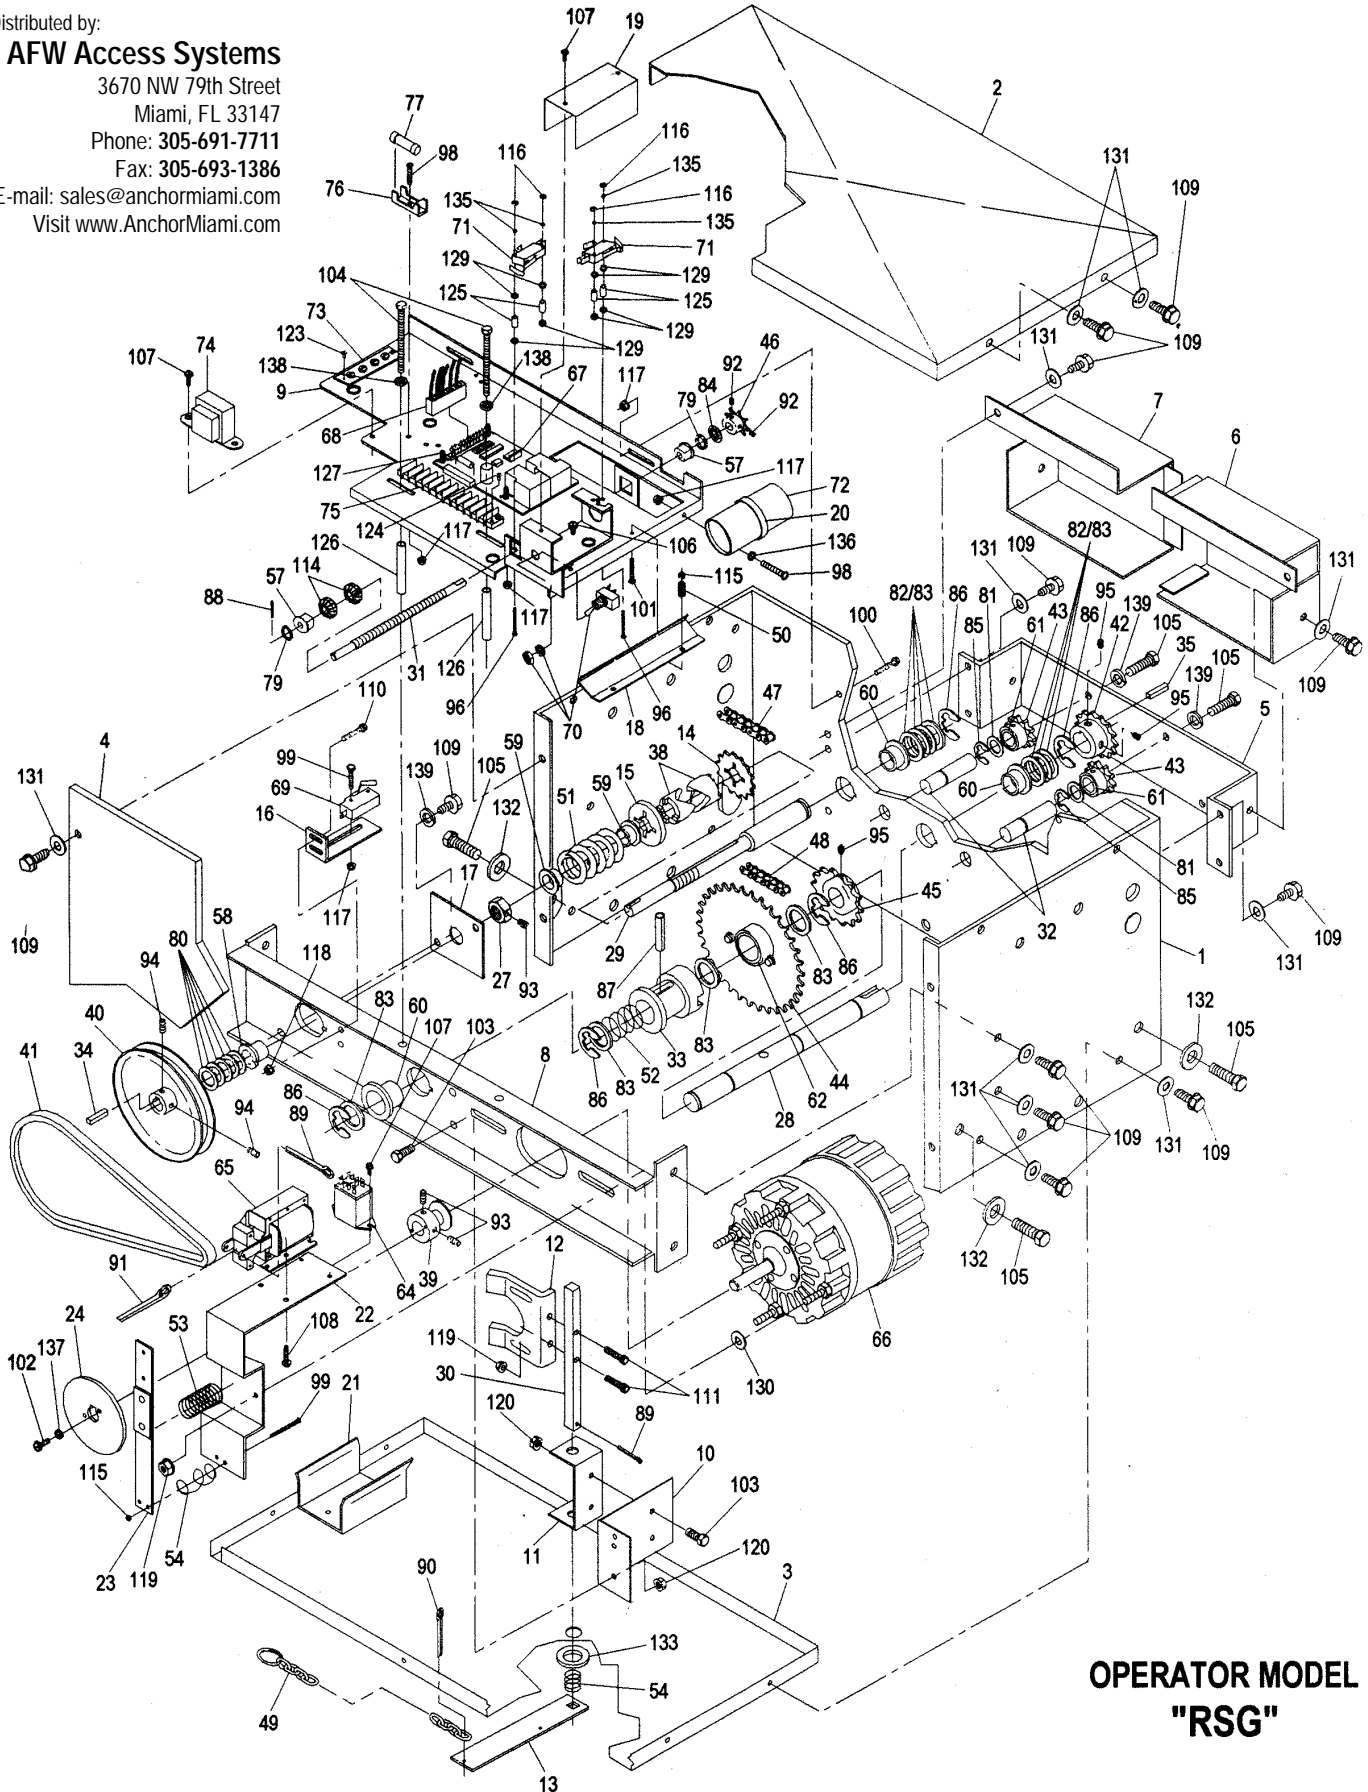

**OPERATOR MODEL
"RSG"**

RSG

ITEM	QTY.	DESCRIPTION	PART #
1	One	Housing	4304
2	One	Top Cover	4306
3	One	Bottom pan	4305
4	One	Front cover	4307
5	One	Idler brace	3506
6	One	Chain guard (right half)	3505-1
7	One	Chain guard (left half)	3505-2
8	One	Drive frame	4303
9	One	Electric plate weldment	4311
10	One	Disconnect mounting bracket	3507
11	One	Disconnect U-bracket	H-123
12	One	Disconnect horseshoe	H-124
13	One	Disconnect lever	M-1000
14	One	Sensitivity sprocket	2210
15	One	Sensitivity disc	2211
16	One	Sensitivity switch bracket	2208
17	One	Lower chain adjusting plate	2215
18	One	Limit nut retainer plate (L/D)	1105
19	One	Junction box cover	4302
20	One	Capacitor strap	1104
21	One	Loop detector bracket	3704
22	One	Brake mounting bracket	3521
23	One	Brake bar (optional)	1303
24	One	Brake disc (optional)	TBD-400
25			
26			
27	One	Sensitivity adjusting nut	76NJ
28	One	Drive shaft	3514
29	One	Sensitivity shaft	3515
30	One	Disconnect (square) shaft	4317
31	One	Limit shaft	1309
32	Two	Idler shaft	3518
33	One	Brass disconnect slider	3513
34	One	3/16" Square key	SK316X1375
35	One	1/4" Square key	SK14X1375
36			
37			
38	Two	Sensitivity cam	2220
39	One	Motor pulley	AS1550
40	One	Drive sheave	AS6058

RSG

ITEM	QTY.	DESCRIPTION	PART #
41	One	V-Belt	4L-330
42	One	Drive sprocket	41B1410
43	Two	Idler sprocket	41B1075
44	One	Pinned sprocket	48B321125
45	One	Limit drive sprocket	48B1410
46	One	Limit driven sprocket	48B7375
47	One	Intermediate drive chain	RC41x41
48	One	Limit chain	RC65x35
49	One	Disconnect chain	8A-12
50	Two	Limit nut guide pressure spring	LC045D3MW
51	One	Sensitivity spring	LCH-162NOMW
52	One	Disconnect slide return spring	C1225
53	One	Upper brake spring	LC072L7MW
54	Two	Lower Brake-& disconnect lever spring	LC055J1MW
55			
56			
57	Two	3/8" Flange bearing	FB-375
58	One	5/8" Flange bearing	FB-625
59	Two	3/4" Flange bearing	FB-750
60	Three	1" Flange bearing	FB-1000
61	Two	3/4" Plain bearing	PB-750
62	One	1" Plain bearing	PB-1000
63			
64	One	Relay	R24A-SEDPDT
65	One	Brake solenoid	4x240
66	One	Motor	PSC-50150
67	One	PC Control board	PRB
68	One	12 Pin wiring harness	12P-HARN
69	One	Sensitivity switch	LS-AT-11
70	One	Toggle switch (incl. nuts)	CA201-73
71	Two	Limit switch	D44
72	One	Capacitor	CAP-70220
73	One	R/C terminal strip	TS-04
74	One	Transformer	T1-2410VA
75	One	12-Position terminal strip	TB-112
76	One	Fuse holder	FH-300-20
77	One	Fuse (6-AMP)	F-250-6
78			
79	Two	3/8" shim	375-050
80	Five	5/8" shim	625-050

RSG

ITEM	QTY.	DESCRIPTION	PART #
81	Two	3/4" Shim	750x050
82	As req.	1" Shim (thin)	1X016
83	As req.	1" Shim (thick)	1X050
84	One	3/8" Push-on retaining ring	PS375012
85	Two	3/4" E-Ring	SE-74
86	Five	1" E-Ring	SE98-01
87	One	Roll pin	R312X1625
88	One	Cotter pin	C093X1
89	Two	Cotter pin	C125X1
90	One	Cotter pin	C125X01.5
91	One	Cotter pin	C125X2
92	Two	Socket set screw	1104SSC
93	Three	Socket set screw	1404SSC
94	Two	Socket set screw	3104SSC
95	Three	Socket set screw	3105SSC
96	Four	Pan head machine screw	0420MSP
97	Three	Pan head machine screw	0606MSP
98	Two	Pan head machine screw	0610MSP
99	Four	Pan head machine screw	0626MSP
100	Two	Hex head machine screw	0608MH
101	Two	Hex head machine screw	0616MH
102	Two	Hex head machine screw	0806MH
103	Four	Hex head bolt	1410CH2
104	Two	Hex head bolt	1448CH2
105	Six	Hex head bolt	3712CH2
106	One	Hex washer head ground screw (green)	1106MSW
107	Four	Hex washer head, type B, sheet metal screw	0804ABSW
108	Two	Hex washer head, type A, sheet metal screw	1408ABSW
109	27	Hex washer head, type B, sheet metal screw	3108ABSW
110	Two	Hex washer head machine screw	0808MSW
111	Two	Socket head cap screw	1114CSP
112			
113			
114	Two	Limit nut	L-100
115	Four	Elastic stop nut	06NS
116	Four	Hex nut	04NH
117	Seven	Serrated flange hex nut	06NR
118	Two	Serrated flange hex nut	08NR
119	Five	Serrated flange hex nut	10NR
120	Four	Serrated flange hex nut	14NR

RSG

ITEM	QTY.	DESCRIPTION	PART #
121			
122			
123	Two	Rivet	1624-00411
124	Two	Rivet	SD-46BS
125	Four	Limit Switch spacer	60223
126	Two	Electric plate spacer	61883
127	Four	Stand off	PSO-14
128			
129	Eight	Flat washer	04WSAE
130	Two	Flat washer	10WSAE
131	23	Flat washer	31WSAE
132	Four	Flat washer	37WSAE
133	One	Flat washer	50WSAE
134			
135	Four	Lock washer	04WS
136	One	Lock washer	06WS
137	Two	Lock washer	08WS
138	Two	Lock washer	14WS
139	Four	Lock washer	37WS

Distributed by:

AFW Access Systems

3670 NW 79th Street

Miami, FL 33147

Phone: 305-691-7711

Fax: 305-693-1386

E-mail: sales@anchormiami.com

Visit www.AnchorMiami.com