

RSW 550

ITEM	QTY.	DESCRIPTION	PART #
1	One	Housing	4004
2	One	Top Cover	4006
3	One	Upper drive frame	4008
4	One	Lower drive frame	4009
5	One	Bottom pan	4005
6	One	Electric plate	4001
7	One	Control arm weldment	2216
8	One	Control arm extension	707-1
9	One	Stop bracket	2207
10	One	Front cover	4007
11	One	Sensitivity switch bracket	2208
12	One	Capacitor strap	1104
13	One	Upper chain adj. plate	2214
14	One	Lower chain adj. plate	2215
15	One	Loop detector bracket	3704
16	One	Sensitivity actuator disc	2211
17	One	Limit switch bracket	CSW-1006
18	Two	Pipe knuckle	2212
19	One	Junction box cover	4002
20			
21			
22	One	3/16" Square key	SK-187
23	One	1/4" Square key	SK-25
24	One	Drive shaft	2201-2
25	One	Sensitivity shaft	2201-1
26	One	Spring spacer	4013
27	Two	Control rod	2221
28	One	Splice bar-control rod	4012
29	One	Gate bracket	T-107-3
30	Two	Sensitivity cam	2220
31	One	Sensitivity adjustment nut	2217
32	One	Motor pulley	AS1550
33	One	Drive sheave	AS6012
34	One	V-belt	4L340
35	Three	Limit collar	SC100-L
36			
37	One	Sensitivity sprocket	2210
38	Three	RSW cluster sprocket	RSW-4014

RSW 550

ITEM	QTY.	DESCRIPTION	PART #
39	One	Standard cluster sprocket	48B14321
40	One	Reduction sprocket	41B3210
41	Four	Drive chain with connecting link	65x41P
42	One	Final drive chain	RC41x41
43	Three	1" Flange bearing	FB-1000
44	One	5/8" Flange bearing	FB-625
45	Four	1" Plain bearing	PB-1000
46	Two	3/8" Plain bearing	PB-375
47			
48	One	Motor	PSC-50150
49	One	PC control board	PRB
50	One	12 Pin wiring harness	12-P-HARN
51	One	12-Position terminal strip	TB-112
52	One	4-Position R/C terminal strip	TS-04
53	One	Transformer	T120-24-10
54	One	Capacitor	CAP-70220
55	One	Fuse holder	FH-300-20
56	One	Fuse	F-250-6
57	One	On/Off power switch	125V-20A
58	One	Sensitivity switch	RSW-SSAT
59	Three	Limit switch	RSW-LSAT
60			
61			
62	Eleven	1" E-Ring	SE-98-01
63	As Req	1" Shim	1x050
64	As Req	1" Shim	1x016
65	Four	5/8" Shim	625x016
66	Four	Roll pin 1/4" x 1"	R250x1000
67	One	Sensitivity spring	C125
68	One	Socket set screw	1404SSC
69	Two	Socket set screw	1410SSC
70	Seven	Socket set screw	3105SSC
71	Four	Square head set screw	SQ1420x625
72	Four	Pan head machine screw	0160MSP
73	Two	Round head machine screw	0636MSR
74	Three	Round head machine screw	1406MSR
75	Three	Hex washer head, type B, sheet metal screw	0804BSW
76	Four	Hex washer head, type B, sheet metal screw	1008BSW

RSW 550

ITEM	QTY.	DESCRIPTION	PART #
77	One	Hex washer head, type B, sheet metal screw (green)	1008BSW(G)
78	24	Hex washer head, type B, sheet metal screw	3108BW
79	Two	Hex washer head machine screw	0806MSW
80	Two	Hex head machine screw	0616MSH
81	Two	Hex head bolt	1410BHT
82	Two	Hex head bolt	3108BHT
83	Four	Hex head bolt	3712BHT
84	One	Hex head bolt	3716BHT
85	Two	Hex head tap bolt	3732BHT
86	Four	2" U-bolt	2"U3/8-16
87			
88	One	Control arm seal ring	SR-100
89	Four	Flat washer	06WSAE
90	24	Flat washer	31WSAE
91	Nine	Flat washer	37WSAE
92	One	Lock washer	06WS
93	Three	Lock washer	14WS
94	Eleven	Lock washer	37WS
95	Eight	Serrated flange hex nut	06NR
96	Two	Serrated flange hex nut	08NR
97	Two	Serrated flange hex nut	11NR
98	Two	Serrated flange hex nut	14NR
99	Two	Serrated flange hex nut	31NR
100			
101	Ten	Hex nut	37NF
102			
103	Two	Phenolic knob	HK-3816
104	Four	Stand off	PSO-14
105	Two	Rivet	1624-00411
106	Four	Rivet	SD-46BS

Distributed by:

AFW Access Systems

3670 NW 79th Street

Miami, FL 33147

Phone: 305-691-7711

Fax: 305-693-1386

E-mail: sales@anchormiami.com

Visit www.AnchorMiami.com