


# Powermaster RSW 2000 Exploded View

Distributed by:  
**AFW Access Systems**  
3670 NW 79th Street  
Miami, FL 33147  
Phone: 305-691-7711  
Fax: 305-693-1386  
E-mail: sales@anchormiami.com  
Visit www.AnchorMiami.com

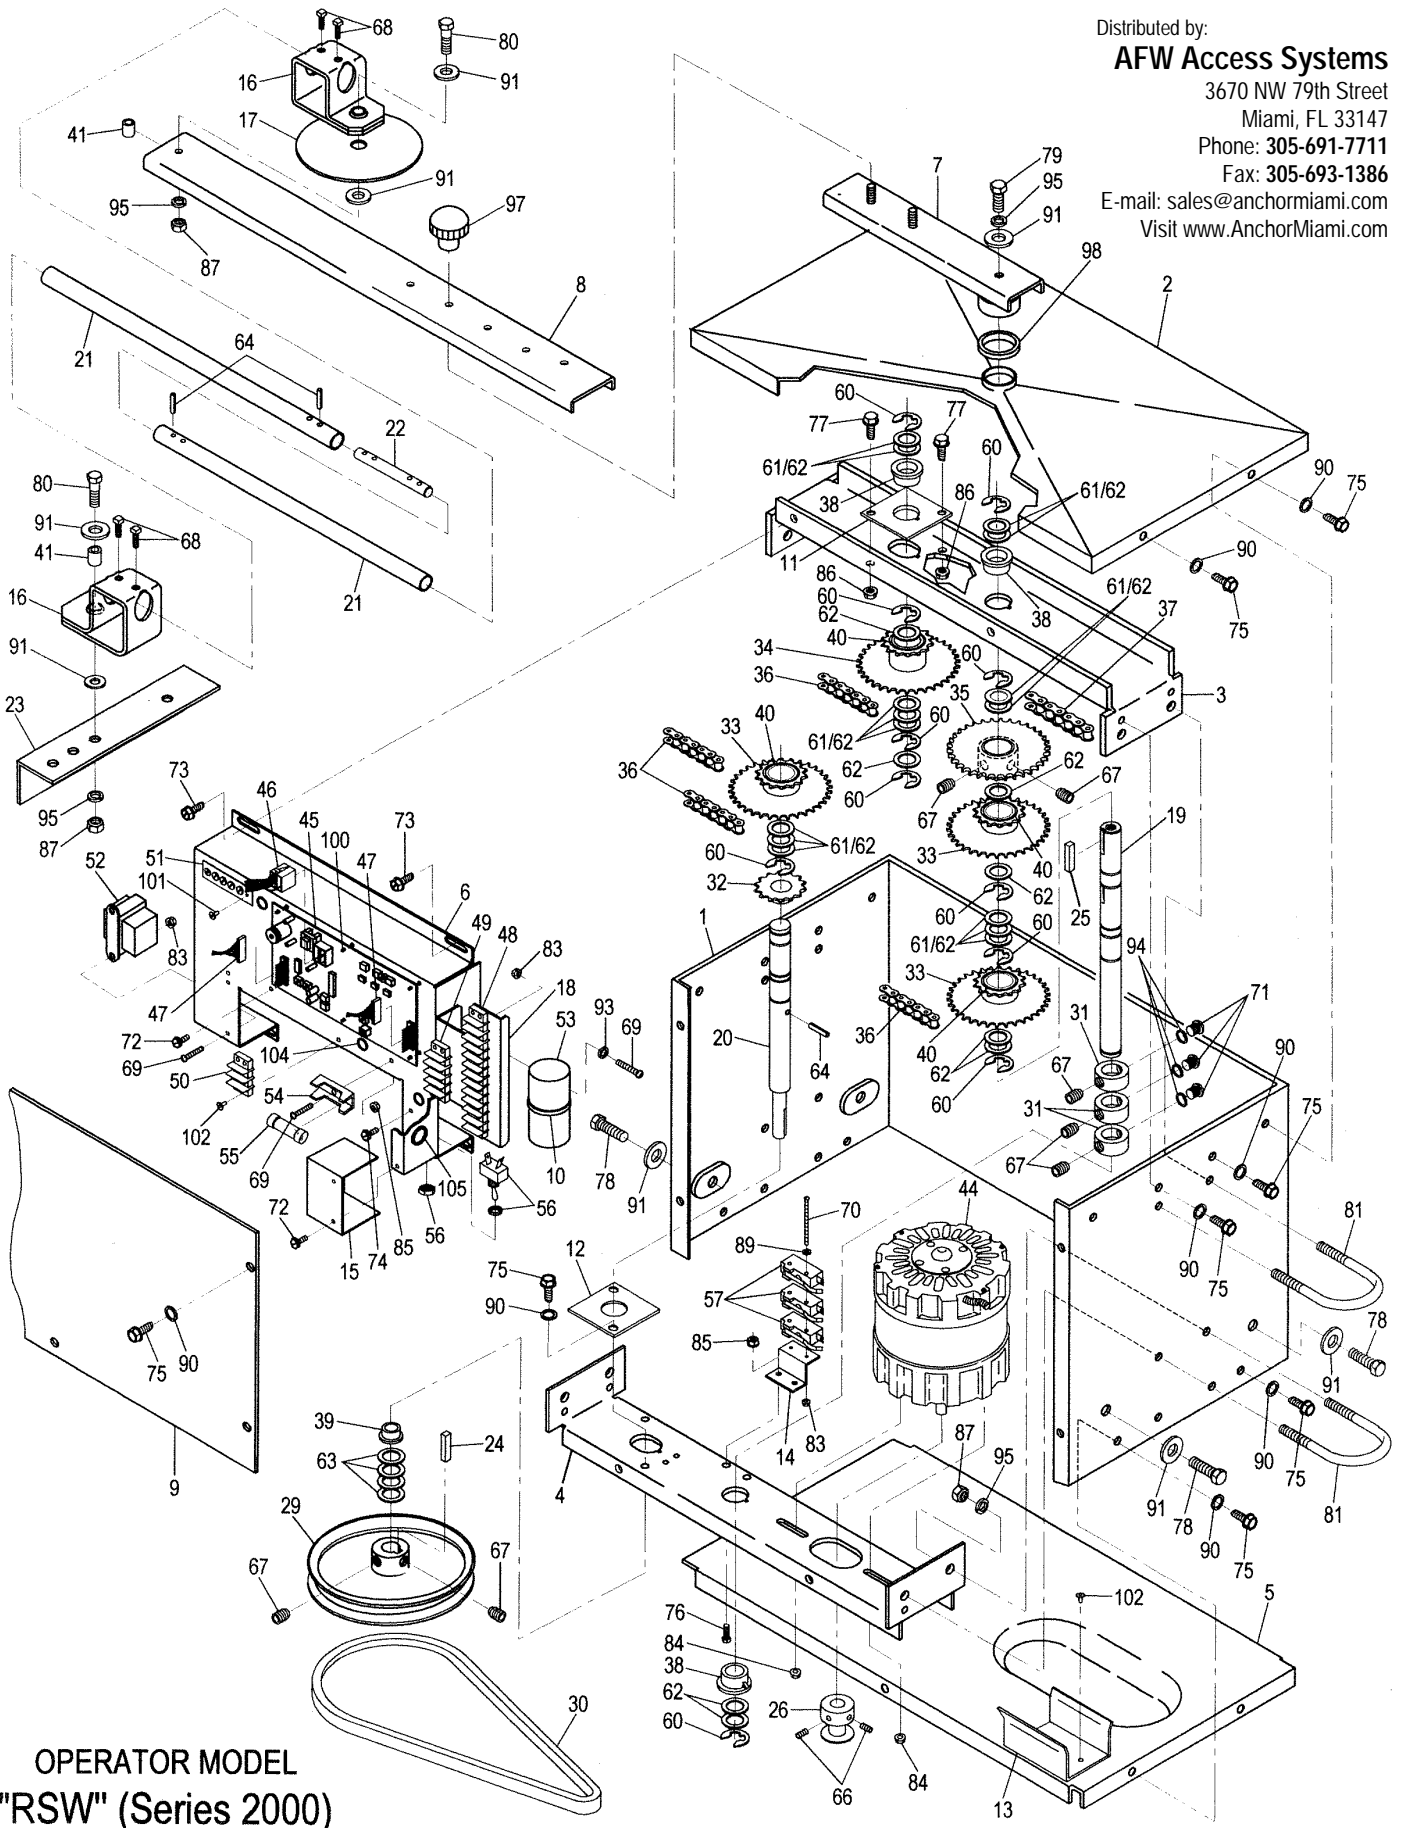

OPERATOR MODEL  
"RSW" (Series 2000)

# RSW (Series 2000)

ITEM	QTY.	DESCRIPTION	PARTS #
1	One	Housing	4004
2	One	Top cover	4006
3	One	Upper drive frame	4008
4	One	Lower drive frame	4009
5	One	Bottom pan	4005
6	One	Electric plate	4001
7	One	Control arm weldment	2216
8	One	Control arm extension	707-1
9	One	Front cover	4007
10	One	Capacitor strap	1104
11	One	Upper chain adjustment plate	2214
12	One	Lower chain adjustment plate	2215
13	One	Loop detector bracket (optional)	3704
14	One	Limit switch bracket	CSW-1006
15	One	Junction box cover	4002
16	Two	Control rod fitting (pipe knuckle)	2212
17	One	Anti-pinch disc	733
18	One	Terminal strip bracket	4017
19	One	Output shaft	4010
20	One	Sensitivity shaft	4011
21	Two	Control rod	2221
22	One	Splice bar-control rod	4012
23	One	Gate bracket	T-107-3
24	One	3/16" Square key	SK316X1.375
25	One	1/4" Square key	SK14X1.375
26	One	Motor pulley	AS1550
27			
28			
29	One	Drive sheave	AS6012
30	One	V-belt	4L-340
31	Three	Limit collar	SC100-L
32	One	Sprocket 48B14X1	7331
33	Three	Cluster sprocket	RSW-4014
34	One	Standard cluster sprocket	48B14321
35	One	Reduction sprocket	41B3210
36	Four	Drive chain with connecting link	RC65X41P
37	One	Final drive chain	RC41X41
38	Three	1" Flange bearing	FB-1000
39	One	5/8" Flange bearing	FB-625
40	Four	1" Plain bearing	PBO-1011275
41	Two	3/8" Plain bearing	PBO-376262
42			
43			
44	One	Motor	PSC-50150
45	One	PC control board	GSMCB02

# RSW (Series 2000)

ITEM	QTY.	DESCRIPTION	PARTS #
46	One	8 Pin wiring harness	8P-HARN
47	Two	10 Pin wiring harness	10P-HARN
48	One	14 Position terminal strip	TS-114
49	One	4 Position terminal strip	TS-04
50	One	2 Position terminal strip	TS-02
51	One	4 Position R/C terminal strip	R/C-TS-04
52	One	Transformer	TU1-24-40VA
53	One	Capacitor	CAP-70220
54	One	Fuse holder	FH-300-20
55	One	Fuse 10 amp	F-250-10
56	One	ON/OFF power switch	2GK51-73
57	Three	Limit switch	RSW-LSAT
58			
59			
60	Eleven	1" E-ring	SE-98-01
61	As Req.	1" Shim	1X016
62	As Req.	1" Shim	1X050
63	Four	5/8" Shim	625X016
64	Five	5/16" X 1-5/8" Roll pin	R312X1.625
65			
66	Two	Socket set screw	1410SSC
67	Seven	Socket set screw	3105SSC
68	Four	Square head set screw	SQ1420X625
69	Four	Pan head machine screw	0610MSP
70	Two	Truss head machine screw	0636MST
71	Three	Round head machine screw	1406MSR
72	Three	Hex washer head type B, sheet metal screw	0804BSW
73	Four	Hex washer head type B, sheet metal screw	1008BSW
74	One	Hex washer head machine screw(green)	1106MSW(G)
75	24	Hex washer head type B, sheet metal screw	3108BW
76	Two	Hex head bolt	1410BHT
77	Two	Hex head bolt	3108BHT
78	Four	Hex head bolt	3712BHT
79	One	Hex head bolt	3716BHT
80	Two	Hex head tap bolt	3732BHT
81	Four	2" U-bolt	2"U3/8-16
82			
83	Six	Serrated flange hex nut	06NR
84	Two	Serrated flange hex nut	11NR
85	Two	Serrated flange hex nut	14NR
86	Two	Serrated flange hex nut	31NR
87	Ten	Hex nut	37NF
88			
89	Two	Flat washer	06WSAE
90	24	Flat washer	31WSAE

# RSW (Series 2000)

ITEM	QTY.	DESCRIPTION	PARTS #
91	Twelve	Flat washer	37WSAE
92			
93	One	Lock washer	06WS
94	Three	Lock washer	14WS
95	Eleven	Lock washer	37WS
96			
97	Two	Phenolic knob	HK-3816
98	One	Control arm seal ring	SR-100
99			
100	Six	Plastic stand off	PSO-14
101	Two	Rivet	1624-00411
102	Eight	Rivet	SD-46BS
103			
104	Three	1/2" Grommet	G-50
105	One	7/8" Grommet	G-87

Distributed by:

**AFW Access Systems**

3670 NW 79th Street

Miami, FL 33147

Phone: 305-691-7711

Fax: 305-693-1386

E-mail: [sales@anchormiami.com](mailto:sales@anchormiami.com)

Visit [www.AnchorMiami.com](http://www.AnchorMiami.com)