


Master and Slave Operation

Important: Be sure that the 120 VAC power (for the Master and the Slave) are connected to the same circuit breaker.


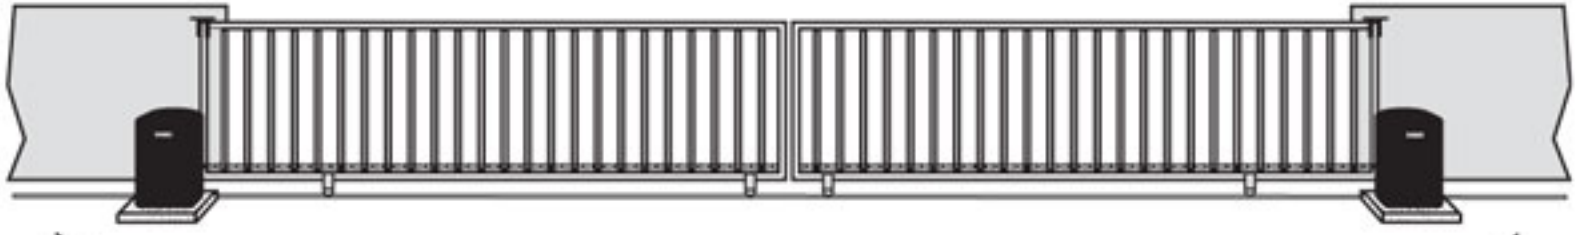


Use 20GA stranded wire for Master/Slave communication

NOTE: The polarity is very important when connecting Master / Slave Operations.



Master Diamond Board

Slave Diamond Board

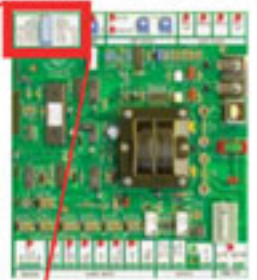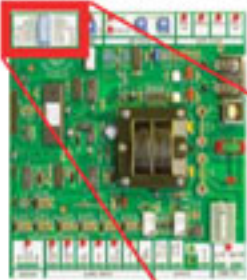

Set dip switch # (ON) for the Master

Set dip switch # (OFF) for the Slave

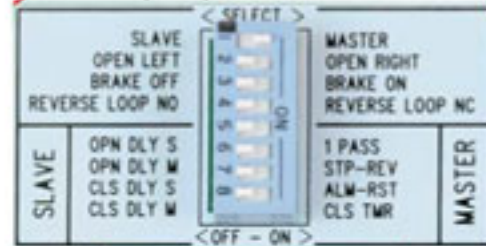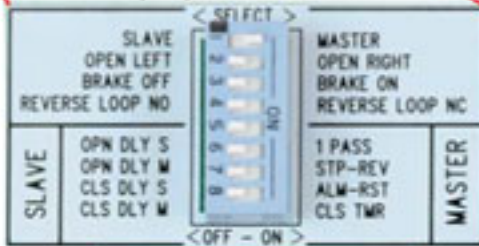


Use 20GA stranded wire

Master Control Options

Use the feature selector to choose available features by designating the various switches (1 through 8)

Gate opening direction, motor brake, reverse loop, one pass, stop reverse, alarm reset, and close timer.

Please check for more information on individual switch functions.

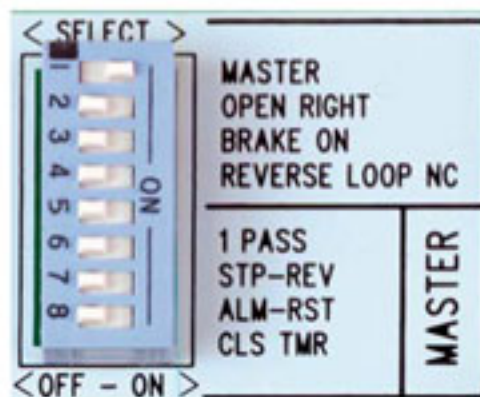

NOTE: Please remember the Eagle Diamond Control Board allows you to connect accessories to the Master or Slave operators.

These accessories include:
 Reverse Loop, Phantom Loop
 Exit Loop, 3 Button Station, Key
 Switch, Lock Box, Fire Dpt. Box,
 Edge Sensors, Telephone Systems