


RELATION BETWEEN OUTPUT AND INDICATOR

Light ON			Dark ON			Sensing State	Output Condition
Stability Indicator	Operation Indicator	Output	Output	Operation Indicator	Stability Indicator		
○	○	ON	OFF	●	○	Stable Light Receiving	Light
						Unstable Light Receiving	
●	●	OFF	ON	○	●	Unstable Light Interrupted	Dark
						Stable Light Interrupted	


Glow ○ Go Off ●

TYPICAL WIRING DIAGRAMS

- 5 cores Cable

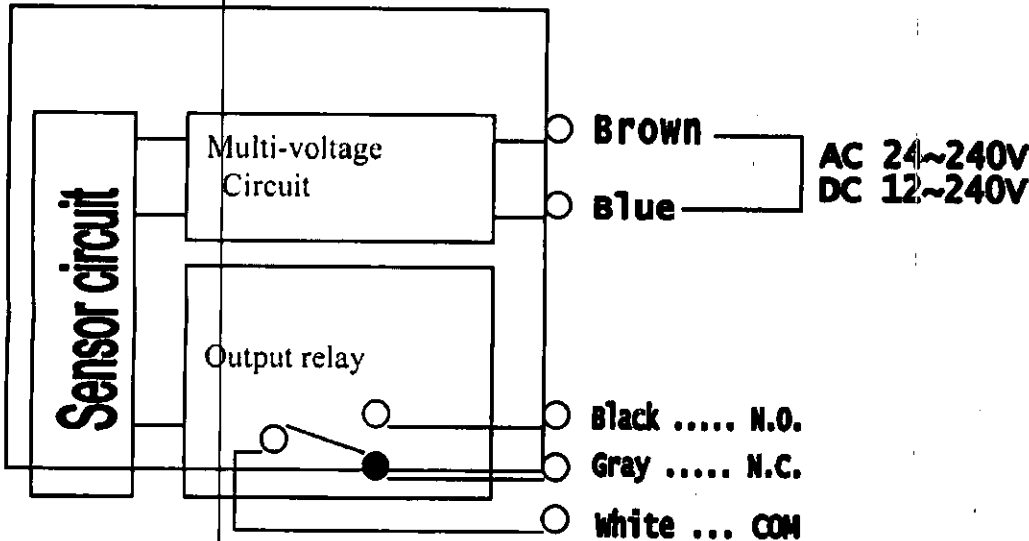

- 2 cores Cable (Emitter unit for Thru-Beam's Emitter)

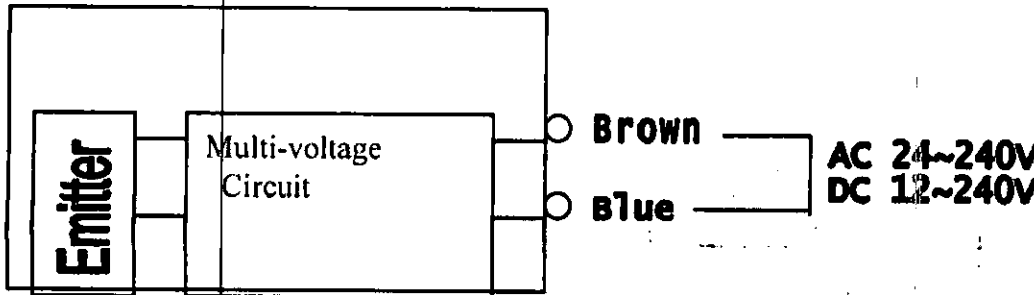

AFW Access Systems

3670 NW 79th Street

Miami, FL 33147

Phone: 305-691-7711 Fax: 305-693-1386

E-Mail: sales@AnchorMiami.com

Web Site: www.AnchorMiami.com