

Emergency Release



EAGLE-200

To release operator, simply unscrew bolt, remove the top cap, and lift the arm.



EAGLE-100

Resetting The Motor

Emerson Motor

Leeson Motor

On all Eagle Access motors, a **red** reset button is available for resetting the motor. If operator ceases to function:


TURN THE POWER TO THE OPERATOR OFF AND ALLOW FOR THE MOTOR TO COOL DOWN...

then simply locate the reset button and press.




Adjusting the Operator's Clutch

Depending on the weight of the gate clutch slippage may occur. Typical Clutch slippage is about 1/4 turn. If it does not slip, readjust the Clutch accordingly.

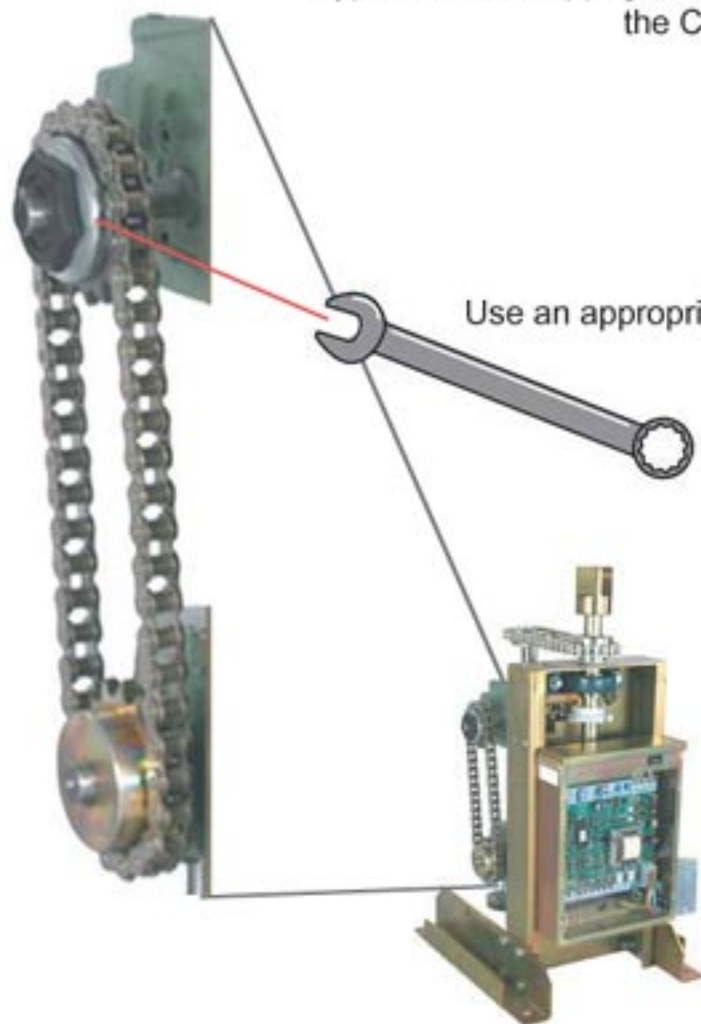

Eagle-200

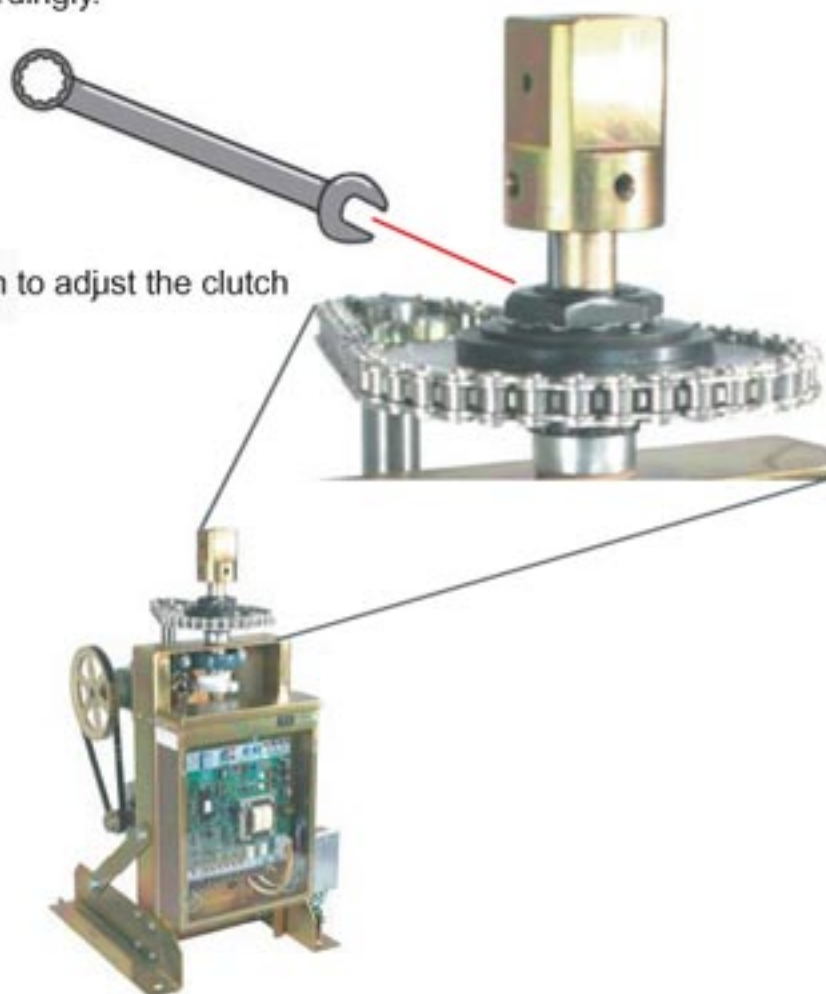

Eagle-100

Use an appropriate wrench to adjust the clutch